



Fuel or vehicle battery anti-theft system.

- + Simple and quick installation.
- + Remote control for activation and deactivation.
- + IP65 with watertight connectors.
- + Anti-movement of the cabin.

DEVICE PARTS



TECHNICAL SPECIFICATIONS

Model	Safety Fuel v2.
Supply voltage	24-29V DC.
Operating current	55 mA.
Siren	120 dB, 5-24V.
Fuse protection	500 mA.
Comunication	SIM card.
Alarms	Acoustic, SMS, mail, Telegram.

INSTALLATION

- Connect the control unit to the truck's battery terminals using the power cable with a protection fuse.
- Place the detection unit on top of the tank, near the filling cap.
- Connect the control unit to the detection unit using the connecting cable.
- 4. Activate the device with the remote control.

- (1) Control unit
- (2) Antenna.
- ③ Fuse.
- 4 Detection unit.
- (5) Connection cable with fuse.
- (6) Remote control.

Pol. Ind. La Canaleta, 3 25300 Tàrrega (Spain)
info@mcsystems.es (+34) 973 50 18 88
www.mcsystems.es



Datasheet February 2025

